

Page 1 of 9

MPP3000 series

PANEL MOUNT PRINTERS



MPP3000 5-8Vdc, 4A peak MPP3010 5-8Vdc, 2A peak MPP3050 10-35Vdc

Features

- Fast-load paper loading feature
- High resolution thermal printing
- 5-8Vdc standard, 10-35Vdc / low power options
- Interfaces RS232 & USB
- Adjustable clip mount, and panel screw mount
- Panel mounting by adjustable clips, or screws
- · Quiet, non-impact system
- Maintenance-free
- · Compact and light weight
- High reliability
- Versatile, for use with text or graphics
- 18, 24, 36 (default), 48, 72 characters per line
- Suitable for paper and label printing
- Windows driver for Win 7 / Vista / XP and 2000
- 60mm diameter, 80mm width paper roll support

Options

- Interface options RS485, TTL
- Bezel—Black(default), Off White, Custom
- · Real Time clock with backup battery
- Customised control membrane / keys / LED's

Introduction

The MPP30xx Series is from the latest range of Martel printers, comprising of compact thermal panel mount printers, incorporating a fixed head mechanism, and "Fast-Load" paper feature. Setting new performance standards for panel-mount units, including a selection of standard options and customisable features.

Designed for maximum versatility, the MPP30xx Series are capable of many different modes of operation. Numerous international character sets and barcodes are selectable. The printers have RS232 serial and USB interface as standard, with RS485 & TTL interfaces as factory options. Flash upgrade capability comes as standard, providing a flexible method of remotely updating the printer's firmware with new customer requirements, with minimal delay.

Power supply options include 5-8Vdc as standard or an optional 10-35Vdc supply giving fast, high resolution printing. Low current options are also available for both supply options.

Paper changing has been simplified by incorporating a hinged front on the robust moulded enclosure. This easy open functionality allows for easier paper roll replacement / replenishment.

Martel manufactures a wide range of cased and compact panel printers. Please contact us to discuss the possibility of customising any aspect of our printer to your specific requirements.

Product Data Sheet

MPP3000

SPECIFICATION Page 2 of 9

General

Printing system Direct thermal line head

Max Characters per line 18, 24, 36 (default), 48, 72 characters per line

Character matrix 8x24, 12x24 or 16x24

Character size 3mm x 2mm, 3mm x 1.5mm or 3mm x 1mm (Approx. 13, 17 or 25cpi)

Horizontal dot pitch 0.125mm (Approx. 200dpi)

Vertical dot pitch 0.125mm

Text line composition 576x24 dots

Printing width 72mm

Power supply

MPP3000/MPP3010 5-8 Vdc MPP3050 10-35Vdc

Current consumption

MPP3000 4A peak MPP3010 2A Peak

MPP3050 2.7A @ 10V, 1.75A @ 15V, 1.5A @ 20V, 1.2A @ 25V, 1.1A @ 30V, 1A @ 35V peak

Paper and language support

Paper width 80mm

Paper capacity 60mm diameter
Character set UK / United States (437)

Country codes USA, France, Germany, UK, Denmark I/II, Sweden, Italy, Japan, Norway, Latin America,

Spain I/II

Data and Interface

USB v2.0

Serial

Data format RS232 (Default, 1 Start, 8 Data, 1 Stop, No Parity)

Baud rates 300, 600, 1200, 2400, 4800, 9600 & 19200, 38400, 57600 & 115200

Handshaking Hardware (CTS line) or Software (XON/XOFF)

Buffer size 5 Kbytes

Dimensions


MPP3000 series 107.5 x 95 x 75 (WxHxD)

Panel cut-out 98.5 x 85 mm

ELECTRICAL CONNECTIONS


Page 3 of 9

Connectors

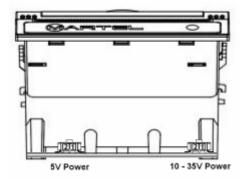

RS232 Connector		
Pin No	[43] [2]	
1	RXD In	
2	TxD Out	
3	CTS	
4	GND	

5V Power Connector		
Pin No	21	
1	0V	
2	5Vdc	

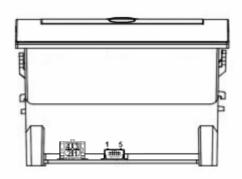

10-35V Power Connector (option)		
Pin No	21	
1	0V	
2	10-35Vdc	

Connectors	Receptacle	Crimp (and quantity)	
RS232	Molex 43025-0400	Molex 43030-0007 (4 off)	
USB	USB Mini B	N/A	
5V Power	Molex 43645-0200	Molex 43030-0007 (2 off)	
10-35V Power (option)	Molex 43645-0200	Molex 43030-0007 (2 off)	

Configuration & Setup

Page 4 of 9

The printer incorporates a number of configurable *options*, each of which has a number of *settings*. The default settings of the standard printer are detailed in the table below in bold. To change the setting of any option, follow the procedure below:

- 1. Ensure the printer is OFF.
- 2. Press and hold the Mode button whilst powering the printer ON. After about five seconds, the Status light will flash five times to show that the printer is in *configuration mode*. Release the Mode button.
- 3. Press the Mode button the same number of times as the option that you wish to change (for example to change baud rate, press the Mode button twice).
- 4. After a short delay, the Status light will flash the same number of times as the option that you have chosen. If you have made a mistake at this stage, simply wait: after a delay, the printer will power-on without changing any options.
- 5. To proceed with configuration, press the Mode button the same number of times as the *setting* that you wish to make (for example, to set the baud rate to 19200, press the Mode button four times).
- 6. After a short delay, the Status light will flash the same number of times as the setting that you have made.
- 7. After a further delay, the printer will power-on with the new setting.

	Option	Setting Number(default in bold)	Setting (default in bold)
1	RS232 Protocol	1	8, No parity
		2	8, Odd parity
		3	8, Even parity
		4	7, Odd, parity
		5	7, Even Parity
2	RS232 Baud Rate	1	115200 baud
		2	57600 baud
		3	38400 baud
		4	19200 baud
		5	9600 baud
		6	4800 baud
		7	2400 baud
		8	1200 baud
		9	600 baud
		10	300 baud
3	RS232 Handshake	1	None
		2	Software
		3	Hardware
4	Default Font	1	Arial 16, 36 CPL
		2	Arial 12, 48 CPL
		3	Arial 8, 72 CPL
5	Character Format	1	Normal
		2	Double Width
		3	Double Height
		4	Double Width & Double Height
6	Print Density	1	Lowest
		2	
		3	
		4	Highest
7	Printer Current	1	Highest
		2	
		3	
		4	Lowest
8	Print Format	1	Standard paper, normal printing
		2	Standard paper, upside down printing
		3	Labels, normal printing
		4	Labels, upside down printing

Product Data Sheet

MPP3000

Control Codes Page 5 of 9

Software Selectable Functions

Underline
Double height
Double width
Graphics
Horizontal tab, plus setting
Form feed, plus setting

11 selectable international character sets Reverse printing Inverse printing Reset Barcodes

Control Codes and Escape Sequences

Function	Code	Decim a I	Hex
Horizontal tab	НТ	9	09
Line feed	LF	10	0 A
Form feed	FF	12	0 C
Carriage return	CR	13	0 D
Double w idth on	SO	14	0 E
Double w idth off	SI	15	0 F
Cancel	CAN	24	18
Set print mode	ESC!n	27 33 n	1B 21 <i>n</i>
Set barcode start position	ES C \$ n1 n2	27 36 n1 n2	1B 24 <i>n1 n2</i>
Set bit image (8 pin single density)	ES C * 0 n1 n2 [d]	27 42 0 n1 n2 [d]	1B 2A 00 <i>n1 n2 [d]</i>
set bit image (8 pin double density)	ES C * 1 n1 n2 [d]	27 42 1 n1 n2 [d]	1B 2A 01 <i>n1 n2 [d]</i>
et bit image (24 pin single density)	ES C * 32 n1 n2 [d]	27 42 32 n1 n2 [d]	1B 2A 20 <i>n1 n2 [d]</i>
et bit image (24 pin double density)	ES C * 33 n1 n2 [d]	27 42 33 n1 n2 [d]	1B 2A 21 <i>n1 n2 [d]</i>
Inderline on	ES C - 1	27 45 1	1B 2D 01
Inderline off	ES C - 0	27 45 0	1B 2D 00
Reset	ESC @	27 64	1B 40
et page length	ESC C n	27 67 n	1B 43 n
et horizontal tabs	ESC D n	27 68 n	1B 44 n
sold on	ES C G	27 71	1B 47
old off	ES C H	27 72	1B 48
et bit image	ES C K n1 n2 [d]	27 75 n1 n2 [d]	1B 4B <i>n1 n2 [d]</i>
Country select	ESCR n	27 82 n	1B 52 <i>n</i>
et black line recognition	ES C L	22 76	1B 4C
ouble w idth on	ESCW 1	27 87 1	1B 57 01
ouble w idth off	ESCW 0	27 87 0	1B 57 00
ompressed bit image graphics	ESCZ n1 [d1] n24 [d24]	27 90 n1 [d1] n24 [d24]	1B 5A n1 [d1] n24 [d24]
rint & feed paper	ES C d n	27 100 n	1B 64 <i>n</i>
eversed on	ES C i 1	27 105 1	1B 69 01
eed to start of next label	ES C f	27 102	1B 66
eversed off	ESCi0	27 105 0	1B 69 00
Send Printer Status	ES C v	27 119	1B 76
ouble height on	ESC w 1	27 119 1	1B 77 01
Oouble height off	ESC w 0	27 119 0	1B 77 00
nverse on	ES C { 1	27 123 1	1B 7B 01
nverse off	ESC { 0	27 123 0	1B 7B 00
set barcode height (1 <u><</u> n <u><</u> 255)	GS h n	29 104 n	1 D 68 <i>n</i>
Print UPC-A barcode	GS k 0 [d] NULL	29 107 0 [d] 0	1D 6B 00 [d] 00
rint UCP-E barcode	GS k 1 [d] NULL	29 107 1 [d] 0	1D 6B 01 [d] 00
rint EAN13 barcode	GS k 2 [d] NULL	29 107 2 [d] 0	1D 6B 02 [d] 00
rint EAN8 barcode	GS k 3 [d] NULL	29 107 3 [d] 0	1D 6B 02 [d] 00
rint Code 39 barcode	GS k 4 [d] NULL	29 107 4 [d] 0	1D 6B 04 [d] 00
Print 2 of 5 barcode	GS k 5 [d] NULL	29 107 5 [d] 0	1D 6B 05 [d] 00
Print Codabar barcode	GS k 6 [d] NULL	29 107 6 [d] 0	1D 6B 06 [d] 00
Print CODE128 barcode	GS k 7 n [d]	29 107 7 n [d]	1D 6B 07 n [d]
Set barcode magnification (2 ≤ n ≤ 4)	GS w n	29 119 n	1D 77 n

Control codes Page 6 of 9


Internation	onal Charact	ter Sets			Print M	lode (ESC!))
Country	Code	Decimal	Нех	Bit	Function	0	1
USA	ESC R O	27 82 0	1B 52 00	0	Character font		
France	ESC R 1	27 82 1	1B 52 01	1	(see below)		
Germany	ESC R 2	27 82 2	1B 52 02	2	Print density		
UK	ESC R 3	27 82 3	1B 52 03	3	(see below)		
Denmark I	ESC R 4	27 82 4	1B 52 04	4	Double height	Cancelled	Set
Denmark i	ESC R 4	27 82 4	1B 52 U4	5	Double width	Cancelled	Set
Sweden	ESC R 5	27 82 5	1B 52 05	6	Undefined		
Italy	ESC R 6	27 82 6	1B 52 06	7	Underline	Cancelled	Set
Spain	ESC R 7	27 82 7	1B 52 07	-			
Japan	ESC R 8	27 82 8	1B 52 08				
Norway	ESC R 9	27 82 9	1B 52 09	Print D	ensity	Bit 3	Bit 2
Denmark II	ESC R 10	27 82 10	1B 52 0A	Light	1 (Default)	0	0
					2	0	1
					3	1	0
				Dark	4	1	1

Character Font	Bit 1	Bit 0
36 characters per line	0	0
72 characters per line	0	1
48 characters per line	1	0
Undefined	1	1

Send Printer Status (ESC v)			
Bit	Function	0	1
2	Paper Out	False	True

Operation Page 7 of 9

 Mode Button and Status LED Operation



Power On Self Test

The self test procedure is initiated by supplying power to the printer while the mode button is depressed. When the mode button is released a test print will be produced.

Status LED

The printer incorporates an LED indicator to report its condition. If there is a fault, the LED will flash in sequence. The fault can be identified by counting the number of flashes.

LED Indication		on	Condition	Solution	
	On		Printer On	-	
	Off		Printer Off	-	
*	*	*	Paper out or door open	Fit new paper	
**	**	**	Thermal head too hot	Allow head to cool	
***	***	***	Power low	Check power supply & connections	
****	****	****	Power low	Check power supply & connections	

Paper Out

The printer will automatically detect when the printer paper has run out, and report this using the Status LED. Use the Mode button to feed through the last few centimetres of paper and fit a new roll.

Operation Page 8 of 9

Head Thermal Limit

After extensive printing the print head temperature may rise to an unusable level. The Status LED will report when this occurs, and printing will be suspended until the head temperature returns to normal levels.

Paper Tear Procedure

When removing printout from the printer, pull the printout toward the tear bar and tear from one side to the other across the serrated edge. Note: paper can be torn in either direction as this printer has a double faced tear bar.

How To Open Lid

Pull the lever until the lid is released from its locked position. To avoid damage do not use excessive force.



Replacing Paper Roll

If the paper roll needs replacing, open the paper cup lid and remove the remaining paper. Reel off a few centimetres from a new roll of paper. Hold approximately 5cm of paper outside the device as you place the new roll into the reservoir. Close the lid by applying equal amounts of pressure on each side ensuring the lid is in the locked position. Now tear the spare paper away.

Paper Feed

Depressing the mode button will allow paper to be fed through the printer.

Product Data Sheet

MPP3000

Mechanical Page 9 of 9

