

## Features



- Easy-Load paper feature
- RS232 Interface
- 10-35VDC Power Supply requirement
- High speed, high resolution printing capability
- Quiet, non-impact system
- Maintenance-free
- Ultra-Compact and light weight
- High reliability line head mechanism
- Versatile for use with text or graphics
- 24, 32 or 48 characters per line
- Barcode capability
- Low power mode
- Supports labels and dual ply paper
- Range of configurable options
- Windows driver for XP and 2000
- Low Profile paper lid, protective boot and belt clip available

## Introduction

The MCP7810V is an ultra-compact, lightweight portable printer with an “easy-load” paper feature. Housed in a new innovative enclosure this printer has an RS232 serial interface via a 6-way RJ12 socket.

Designed for maximum versatility, the MCP7810V is compatible with existing systems whilst allowing many upgrades in terms of printing speed and functionality.

It requires an unregulated power supply ranging from 10-35V dc and has maintenance free operation, only available with thermal printers.

Many different modes of operation are possible, including numerous character sets, all selectable by software commands.

The MCP7810V is one of a family of thermal printers designed and manufactured in the UK by Martel. All units are built with robust ABS housings. We would be pleased to discuss the possibility of customising any aspect of the printer to specific requirements.

# 1. PRINTER SPECIFICATIONS

## 1.1 Overall Specification

Printing system	Direct thermal line head
Max Characters per line	48, 32, 24(default)
Character matrix	24x8, 24x12 or 24x16
Character size	3mm x 2mm, 3mm x 1.5mm or 3mm x 1mm (Approx. 13, 17 or 25cpi)
Horizontal dot pitch	0.125mm (Approx. 200dpi)
Vertical dot pitch	0.125mm
Text line composition	24x384 dots
Printing width	48mm
Average printing speed	10 lines per second (max)
Dimensions	85.5mm x 150mm x 55mm (45mm low profile printer)
Weight	400g approx
External power supply	10-35V dc
Current consumption, operating	2.7A @ 10V, 1.75A @ 15V, 1.5A @ 20V, 1.2A @ 25V, 1.1A @30V, 1A @ 35V Peak
Paper width	58mm
Paper capacity	44mm dia, 25m (std printer) 32mm dia, 10m (low profile printer)
Recommended paper	TF50-KS-E2D
Character set	ASCII
Country codes	USA, France, Germany, UK, Denmark I/II, Sweden, Italy, Spain & Japan
Interface	
Data format	RS232C
Connector	6-way RJ12 socket
Baud rates	300, 600, 1200, 2400, 4800, 9600 & 19200
Handshaking	Hardware (CTS line) or Software (XON/XOFF)
Buffer size	5 Kbytes
Environmental Conditions	
Operating range	0°C to +50°C
Storage range	-20°C to +60°C
Charging range	+10°C to +45°C
MTBF	Approx. 10 Million lines (20°C, print ratio = 25%)
Power consumption	
Sleep	<1mA
Standby	30mA
Running	Min 0.4A Ave 1.3A Max 2.8A


## 1.2 Serial Interface

The RS232C standard is used, and the baud rate is selectable via Configuration Option 2 (see page 3).

The printer is fitted with a 6-way RJ12 socket (Fig 1 illustrates the pin numbers for the connector), the pin assignments and interface signals are defined below.

PIN	Signal	I/O	Definition
1	GND	N/A	Signal ground
2	TxD	0	Transmitted data to host
3	RxD	1	Received data from host
4	CTS	0	Clear to Send
5	n/c	N/A	No connection
6	n/c	N/A	No connection

**Fig 1: Pin Numbers for Serial Interface Connector**

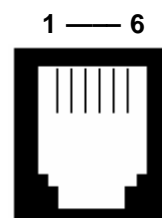

## 2.1 Configuration Options

The printer incorporates a number of configurable *options*, each of which has a number of *settings*. The default settings of the standard printer are detailed in the table below in bold. To change the setting of any option, follow the procedure below:

1. Ensure the printer is OFF.
2. Press and hold the Mode button. After about five seconds, the Status light will flash five times to show that the printer is in *configuration mode*. Release the Mode button.
3. Press the Mode button the same number of times as the *option* that you wish to change (for example to change baud rate, press the Mode button twice).
4. After a short delay, the Status light will flash the same number of times as the option that you have chosen. If you have made a mistake at this stage, simply wait: after a delay, the printer will power-on without changing any options.
5. To proceed with configuration, press the Mode button the same number of times as the *setting* that you wish to make (for example, to set the baud rate to 19200, press the Mode button once).
6. After a short delay, the Status light will flash the same number of times as the setting that you have made.
7. After a further delay, the printer will power-on with the new setting.

Option Number	Option Description	Setting Number (default in bold)	Setting (default in bold)
1	RS232 Protocol	<b>1</b>	<b>8, No parity</b>
		2	8, Odd parity
		3	8, Even parity
		4	7, Odd, parity
		5	7, Even Parity
2	RS232 Baud Rate	1	19200 baud
		<b>2</b>	<b>9600 baud</b>
		3	4800 baud
		4	2400 baud
		5	1200 baud
		6	600 baud
		7	300 baud
3	RS232 Flow Control	<b>1</b>	<b>None</b>
		2	Software
		3	Hardware
4	Font	<b>1</b>	<b>Arial 16, 24 CPL</b>
		2	Arial 12, 32 CPL
		3	Arial 8, 48 CPL
5	Character Format	<b>1</b>	<b>Normal</b>
		2	Double Width
		3	Double Height
		4	Double Width and Height
6	Print Density	<b>1</b>	<b>Lowest</b>
		2	
		3	
		4	Highest
7	Printer Current	<b>1</b>	<b>Highest</b>
		2	
		3	
		4	Lowest
8	Print Format	<b>1</b>	<b>Standard paper, normal printing</b>
		2	Standard paper, upside down printing
		3	Labels, normal printing
		4	Labels, upside down printing
9	Sleep / Wake-up	<b>1</b>	<b>Never sleep</b>
		2	Sleep after 1 minute
		3	Sleep after 2 minutes
		4	Sleep after 5 minutes
		5	Sleep after 10 minutes
		6	Off, 1 min
		7	Off, 2 min
		8	Off, 5 min
		9	Off, 10 min

## 2.2 Software Selectable Functions

Underline	Horizontal tab, plus setting	Inverse printing
Double height	Form feed, plus setting	Reset
Double width	11 selectable international character sets	Barcodes
Graphics	Reverse printing	

## 2.3 Control Codes and Escape Sequences

Function	Code	Decimal	Hex
Horizontal tab	HT	9	09
Line feed	LF	10	0A
Form feed	FF	12	0C
Carriage return	CR	13	0D
Double width on	SO	14	0E
Double width off	SI	15	0F
Cancel	CAN	24	18
Set print mode	ESC ! <i>n</i>	27 33 <i>n</i>	1B 21 <i>n</i>
Set barcode start position	ESC \$ <i>n1 n2</i>	27 36 <i>n1 n2</i>	1B 24 <i>n1 n2</i>
Set bit image (8 pin single density)	ESC * 0 <i>n1 n2 [d]</i>	27 42 0 <i>n1 n2 [d]</i>	1B 2A 00 <i>n1 n2 [d]</i>
Set bit image (8 pin double density)	ESC * 1 <i>n1 n2 [d]</i>	27 42 1 <i>n1 n2 [d]</i>	1B 2A 01 <i>n1 n2 [d]</i>
Set bit image (24 pin single density)	ESC * 32 <i>n1 n2 [d]</i>	27 42 32 <i>n1 n2 [d]</i>	1B 2A 20 <i>n1 n2 [d]</i>
Set bit image (24 pin double density)	ESC * 33 <i>n1 n2 [d]</i>	27 42 33 <i>n1 n2 [d]</i>	1B 2A 21 <i>n1 n2 [d]</i>
Underline on	ESC - 1	27 45 1	1B 2D 01
Underline off	ESC - 0	27 45 0	1B 2D 00
Reset	ESC @	27 64	1B 40
Set page length	ESC C <i>n</i>	27 67 <i>n</i>	1B 43 <i>n</i>
Set horizontal tabs	ESC D <i>n</i>	27 68 <i>n</i>	1B 44 <i>n</i>
Bold on	ESC G	27 71	1B 47
Bold off	ESC H	27 72	1B 48
Move <i>n</i> dot lines forwards ( $1 \leq n \leq 23$ )	ESC J <i>n</i>	27 74 <i>n</i>	1B 4A <i>n</i>
Set bit image	ESC K <i>n1 n2 [d]</i>	27 75 <i>n1 n2 [d]</i>	1B 4B <i>n1 n2 [d]</i>
Country select	ESC R <i>n</i>	27 82 <i>n</i>	1B 52 <i>n</i>
Double width on	ESC W 1	27 87 1	1B 57 01
Double width off	ESC W 0	27 87 0	1B 57 00
Compressed bit image graphics	ESC Z <i>n1 [d1] ... n24 [d24]</i>	27 90 <i>n1 [d1] ... n24 [d24]</i>	1B 5A <i>n1 [d1] ... n24 [d24]</i>
Print & feed paper	ESC d <i>n</i>	27 100 <i>n</i>	1B 64 <i>n</i>
Label advance	ESC f	27 102	1B 66
Reversed on	ESC i 1	27 105 1	1B 69 01
Reversed off	ESC i 0	27 105 0	1B 69 00
Move <i>n</i> dot lines backwards ( $1 \leq n \leq 23$ )	ESC j <i>n</i>	27 106 <i>n</i>	1B 6A <i>n</i>
Double height on	ESC w 1	27 119 1	1B 77 01
Double height off	ESC w 0	27 119 0	1B 77 00
Inverse on	ESC { 1	27 123 1	1B 7B 01
Inverse off	ESC { 0	27 123 0	1B 7B 00
Set barcode height ( $1 \leq n \leq 255$ )	GS h <i>n</i>	29 104 <i>n</i>	1D 68 <i>n</i>
Print UPC-A barcode	GS k 0 [ <i>d</i> ] NULL	29 107 0 [ <i>d</i> ] 0	1D 6B 00 [ <i>d</i> ] 00
Print UCP-E barcode	GS k 1 [ <i>d</i> ] NULL	29 107 1 [ <i>d</i> ] 0	1D 6B 01 [ <i>d</i> ] 00
Print EAN13 barcode	GS k 2 [ <i>d</i> ] NULL	29 107 2 [ <i>d</i> ] 0	1D 6B 02 [ <i>d</i> ] 00
Print EAN8 barcode	GS k 3 [ <i>d</i> ] NULL	29 107 3 [ <i>d</i> ] 0	1D 6B 02 [ <i>d</i> ] 00
Print Code 39 barcode	GS k 4 [ <i>d</i> ] NULL	29 107 4 [ <i>d</i> ] 0	1D 6B 04 [ <i>d</i> ] 00
Print 2 of 5 barcode	GS k 5 [ <i>d</i> ] NULL	29 107 5 [ <i>d</i> ] 0	1D 6B 05 [ <i>d</i> ] 00
Print Codabar barcode	GS k 6 [ <i>d</i> ] NULL	29 107 6 [ <i>d</i> ] 0	1D 6B 06 [ <i>d</i> ] 00
Print CODE128 barcode	GS k 7 <i>n [d]</i>	29 107 7 <i>n [d]</i>	1D 6B 07 <i>n [d]</i>
Set barcode magnification ( $2 \leq n \leq 4$ )	GS w <i>n</i>	29 119 <i>n</i>	1D 77 <i>n</i>

## 2.4 International Character Sets

Country	Code	Decimal	Hex
USA	ESC R 0	27 82 0	1B 52 00
France	ESC R 1	27 82 1	1B 52 01
Germany	ESC R 2	27 82 2	1B 52 02
UK	ESC R 3	27 82 3	1B 52 03
Denmark I	ESC R 4	27 82 4	1B 52 04
Sweden	ESC R 5	27 82 5	1B 52 05
Italy	ESC R 6	27 82 6	1B 52 06
Spain	ESC R 7	27 82 7	1B 52 07
Japan	ESC R 8	27 82 8	1B 52 08
Norway	ESC R 9	27 82 9	1B 52 09
Denmark II	ESC R 10	27 82 10	1B 52 0A

## 2.5 Print Mode (ESC!)

Bit	Function	Value	
		0	1
0	Character font		
1	} (see below)		
2			
3	} (see below)		
4		Double height	Cancelled
5	Double width	Cancelled	Set
6	Undefined		
7	Underline	Cancelled	Set

## 2.6 Character Font

	Bit 1	Bit 0
24 characters per line	0	0
48 characters per line	0	1
32 characters per line	1	0
Undefined	1	1


## 2.7 Print Density

	Bit 3	Bit 2
Light 1 (Default)	0	0
2	0	1
3 (Label Default)	1	0
Dark 4	1	1

# 3. PRINTER OPERATION

## 3.1 Power Supply

Power is supplied to the printer from a 10-35V dc external supply via a 2.1/5.5mm connector (+VE OUTER) located in the base of the printer.



Power connection through the RJ12 connector is available as a factory option.

## 3.2 Power On Procedure

Open the paper reservoir lid, ensure that the roll is present and that there are no foreign objects inside the paper cup. Close the lid, ensuring that the paper passes through the paper exit slot.

When the Status indicator is off, the printer is off. A brief press of the Mode button turns the printer on, the Status indicator will illuminate and the printer mechanism will reset. A brief press of the Mode button will turn the printer off. When the printer is asleep, pressing the Mode button will wake up the printer.

## 3.3 Low Power Mode

The MCP7810V incorporates two low power modes; configured via option 9, page 3.

In **Sleep mode** the printer enters low power mode after a preset period of inactivity. Once asleep, the printer can be woken by sending a NULL character 1 sec before data to be printed, OR the printer can be woken by pressing the Mode button.

In **Auto off mode** the printer cannot be woken by data transfer and must be powered-on manually.

## 3.4 Paper Tear Procedure

When removing the printout from the printer, pull the printout toward the front of the printer and tear from one side to the other across the serrated edge.

## 4. PRINTER MAINTENANCE

### 4.1 Power On Self Test

The self test procedure will check most of the printer functions, except for the serial Interface, i.e: Printer mechanism, Control circuitry, Firmware version, Print quality. When the printer is off, press and hold the Mode button depressed for approximately 2 seconds. Release the button, the printer will power on and print a self-test report.

### 4.2 Status LED

The printer incorporates an LED indicator to report its condition. If there is a fault, the LED will flash in sequence. The fault can be identified by counting the number of flashes.

LED Indication	Condition	Solution
On	Printer On	-
Off	Printer Off or Asleep	-
* * *	Paper out	Fit new paper
** ** *	Thermal head too hot	Allow head to cool
*** ** *	Power below 10V dc	Check supply voltage

### 4.3 Paper Out

The printer will automatically detect when the printer paper has run out, and report this using the Status LED. Replace the paper roll as described below.

### 4.4 Head Thermal Limit

After extensive printing the print head temperature may rise to an unusable level. The Status LED will report when this occurs, and printing will be suspended until the head temperature returns to normal levels.

### 4.5 How to open Paper Reservoir Lid

Pull the lever upwards and forward until the lid is released from its locked position. To avoid damage do not use excessive force.

### 4.6 Replacing Paper Roll

If the paper roll needs replacing, open the paper reservoir lid and remove the remaining paper. Reel off a few centimetres from a new roll of paper, hold approximately 5cm of paper outside the printer as the roll is placed into the reservoir. Close the lid by applying equal amounts of pressure on each side until the lid is in the locked position. Now tear the surplus paper away.

## 5. ACCESSORIES & CONSUMABLES

### 5.1 Paper / Labels

Description	Part Number
Thermal Paper Roll, 25m	MM58
Thermal Paper Roll, 10m	MM58/10
Thermal Label Roll, label size 54mm x 70mm, 75 per roll	ML58/75
Continuous Thermal Label Roll, 6m	ML58/C48

### 5.2 Cables

Description	Part Number
Serial Data Cable, RJ12/D9	MGK20
Power Cable	MGK92

### 5.3 Protective Boot

Description	Part Number
Protective Boot with magnetic Inserts	MPB500

Low profile paper lid (10m paper roll capacity), belt dip and threaded insert options available on request.



## **Martel Instruments Limited**

Stanelaw Way, Tanfield Lea Industrial Estate, Stanley, Durham DH9 9XG, UK  
Tel: +44 (0) 1207 290266 Fax: +44 (0) 1207 290239 Email: [sales@martelinstruments.com](mailto:sales@martelinstruments.com)

**USA Sales Office:** 14892 Trojan Circle, Huntington Beach, CA 92647  
Tel: (714) 892-0086 Fax: (714) 892-0096 Email: [martelusa@earthlink.net](mailto:martelusa@earthlink.net)

**Website:** [www.martelinstruments.com](http://www.martelinstruments.com)

MCP7810V/AD/B

**© MARTEL  
INSTRUMENTS**

All instruments designed and  
manufactured in Great Britain.  
The manufacturer reserves the  
right to alter specifications  
without prior notice